


# Canon

LV-HD420  
LV-X420

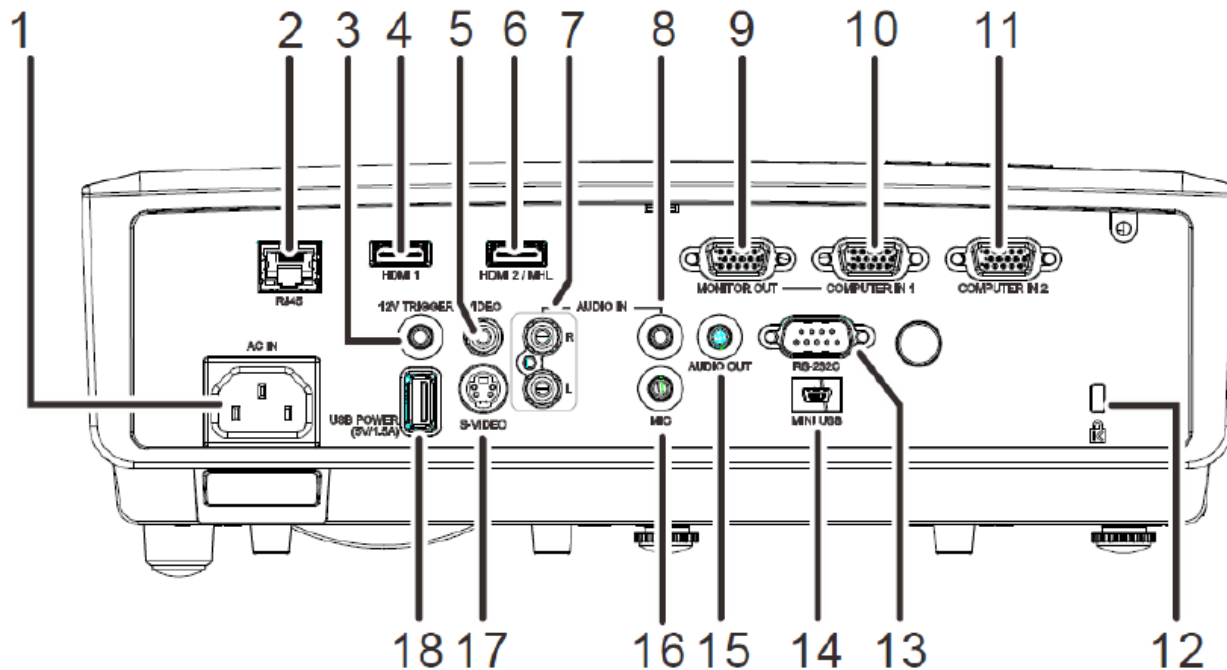

|                         |   |
|-------------------------|---|
| 1. AC IN                | Power Input                               |
| 2. RJ-45                | Network connection                        |
| 3. Mini jack            | 12V output (trigger for screen operation) |
| 4. HDMI                 | HDMI input                                |
| 5. RCA                  | Video input                               |
| 6. HDMI/MHL             | HDMI/MHL input                            |
| 7. 2RCA                 | Audio input (L/R)                         |
| 8. Mini jack            | Audio input (*1)                          |
| 9. Mini Dsub15          | Analog PC output                          |
| 10. Mini Dsub15         | Analog PC / Component input               |
| 11. Mini Dsub15         | Analog PC / Component input               |
| 12. Antitheft lock hole | Connects antitheft wire                   |
| 13. Dsub9               | RS232C connection                         |
| 14. USB mini B          | Service port                              |
| 15. Mini jack           | Audio output                              |
| 16. Mini jack           | Microphone input (*1)                     |
| 17. Mini DIN4           | S-video input                             |
| 18. USB type A          | Power Supply                              |

\*1 Either the audio or microphone input can be enabled at a time.